

PANEL INSTALLATION CHART

Full Frame Options

Key: X = Operable O = Fixed
Always begin installation with inner most panel and work towards exterior panel.

2P2T

INTERIOR

X

X

EXTERIOR

2P2T-XX

INTERIOR

X

X

EXTERIOR

2P2T-XXR

INTERIOR

O

X

EXTERIOR

2P2T-OX

INTERIOR

X

O

EXTERIOR

2P2T-XOR

3P2T

INTERIOR

O

X

O

EXTERIOR

3P2T-OXOL

INTERIOR

O

X

O

EXTERIOR

3P2T-OXOR

3P3T

INTERIOR

X

X

X

EXTERIOR

3P3T-XXX

INTERIOR

X

X

X

EXTERIOR

3P3T-XXXR

INTERIOR

X

X

O

EXTERIOR

3P3T-XXO

INTERIOR

O

X

X

EXTERIOR

3P3T-OXXR

4P2T

INTERIOR

X

X

X

X

EXTERIOR

4P2T-XX-XX

INTERIOR

O

X

X

O

EXTERIOR

4P2T-OX-OX

4P4T

INTERIOR

X

X

X

X

EXTERIOR

4P4T-XXXX

INTERIOR

X

X

X

X

EXTERIOR

4P4T-XXXXR

INTERIOR

X

X

X

O

EXTERIOR

4P4T-XXXO

INTERIOR

O

X

X

X

EXTERIOR

4P4T-OXXXR

Pocket Options

2P2T

INTERIOR

X

X

EXTERIOR

2P2T-PXX

INTERIOR

X

X

EXTERIOR

2P2T-XXPR

3P3T

INTERIOR

X

X

X

EXTERIOR

3P3T-PXXX

INTERIOR

X

X

X

EXTERIOR

3P3T-XXXPR

4P2T

INTERIOR

X

X

X

X

EXTERIOR

4P2T-PXX-XXP

4P4T

INTERIOR

X

X

X

X

EXTERIOR

4P4T-PXXXX

INTERIOR

X

X

X

X

EXTERIOR

4P4T-XXXXPR