




Installing Flashing Flanges on a 650 Patio Door

If using a Flashing Flange, attach the flanges after completing Frame Assembly steps 1–4 but before installing the unit.

- 1** Install Head Flange first,
Jamb Flanges second





- 2** Apply 1/4" bead of
white silicone (supplied)
in Flange track of Main Frame
or Adapter Track


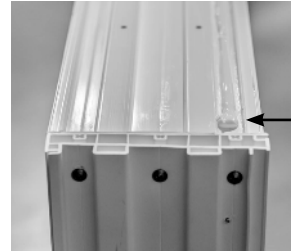


Main frame or
adapter track

- 3** Place Flange in track
(orientation is optional,
but manufacturer
suggestion is as shown)

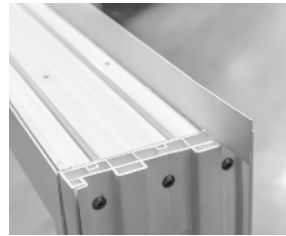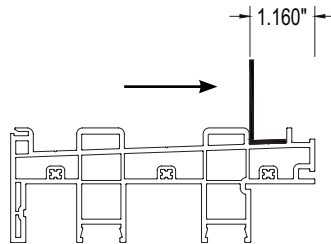

- 4** Affix Flange with
#8 - 5/8" Phillips Head
screws provided (part 25)
at the following positions

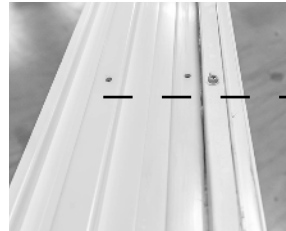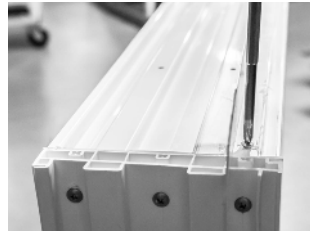


B. In line with
installation
holes on main
frame


A. 2" From each corner

- 5** Dry fit the Jamb Flange
into the track to ensure
proper fit

IMPORTANT: For proper
water diversion, Head Flange
must overlap in front of the
Jamb Flange

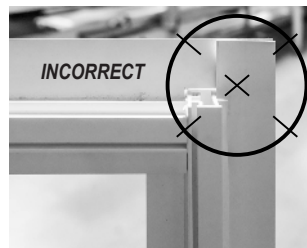

- 6** Follow steps 2-5 for
each Jamb Flange, being
sure to match the orientation
of the Head Flange

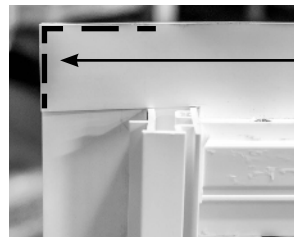

A. Ensure that
the corners are
flush



Instalación de Aletas de Sellado en una Puerta de Patio 650

Si se va a utilizar una aleta de sellado, instálela después de completar los pasos 1-4 del Ensamblaje del Marco, pero antes de instalar la unidad.

- 1 Instale primero la Aleta Superior, y después las Aletas Laterales





- 2 Aplique un cordón de 1/4" de silicona blanca (incluida) en el canal de la aleta del marco principal o del canal del adaptador

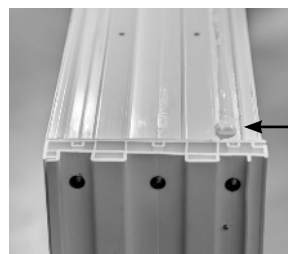
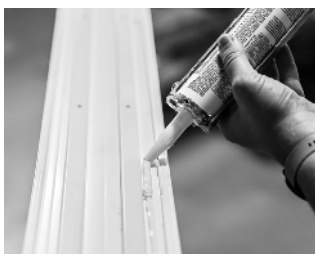


Marco principal o canal del adaptador

- 3 Coloque la aleta en el canal (la orientación es opcional, pero se recomienda seguir la sugerida por el fabricante)

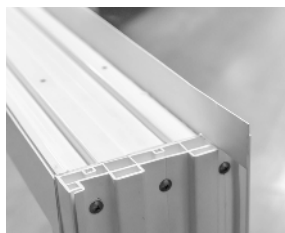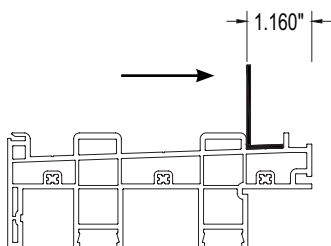

- 4 Fije la aleta con los tornillos Phillips #8 - 5/8" proporcionados (pieza 25) en las siguientes posiciones

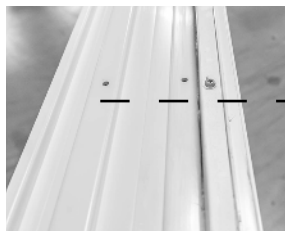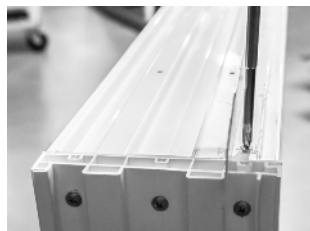


B. Alineados con los orificios de instalación del marco principal


A. 2" De cada esquina

- 5 Pruebe en seco la Aleta Lateral en el canal para asegurar un ajuste adecuado

IMPORTANTE: Para una correcta desviación del agua, la Aleta Superior debe superponerse por delante de las Aletas Laterales

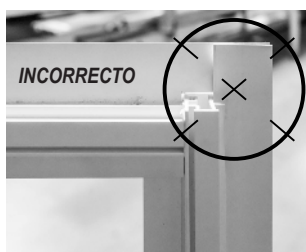

- 6 Siga los pasos 2-5 para cada Aleta Lateral, asegurándose de igualar la orientación de la Aleta Superior

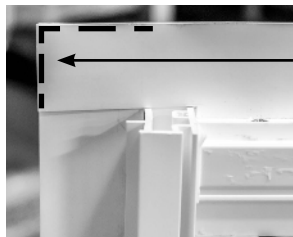

A. Asegúrese de que las esquinas estén alineadas